

# DigiTech™ H1 Digital Combination Lock USER INSTRUCTIONS

### **DAY-USE MODE**

UNLOCK

USER OR MASTER CODE

\*\*\*

HANDLE

POPS-OUT

**TURN HANDLE** 

TO OPEN

#### LOCK

ENTER USER CODE (4 DIGITS)



CONFIRM CODE (4 DIGITS)



PUSH IN HANDLE TO LOCK



ERROR TRY AGAIN

#### **ERROR**



#### Errors will time-out after 4 seconds.

Unfinished instructions will time-out after 4 seconds. Always wait for LED lights to finish before pressing next key.

#### PERMANENT MODE

#### UNLOCK

# CHANGE USER CODE

USER OR MASTER CODE



HANDLE POPS-OUT TURN HANDLE TO OPEN



PUSH IN HANDLE TO LOCK



LOGO



**OLD USER CODE** 



02



ENTER
NEW USER CODE
(4 DIGITS)



CONFIRM
NEW USER CODE
(4 DIGITS)



### PUSH IN HANDLE TO LOCK



We Stock It
You Sell It
We Ship It. FAST!
IT REALLY IS THAT EASY

## EMERGENCY KEY OVERIDE

INSERT MASTER KEY OVERIDE & TURN 90° EITHER CLOCKWISE OR ANTI-CLOCKWISE

TURN KEY BACK 90° TO ORIGINAL POSITION & REMOVE FROM LOCK



