
VALUEMAX™ K.D. WARDROBE STOCK LOCKER ASSEMBLY INSTRUCTIONS

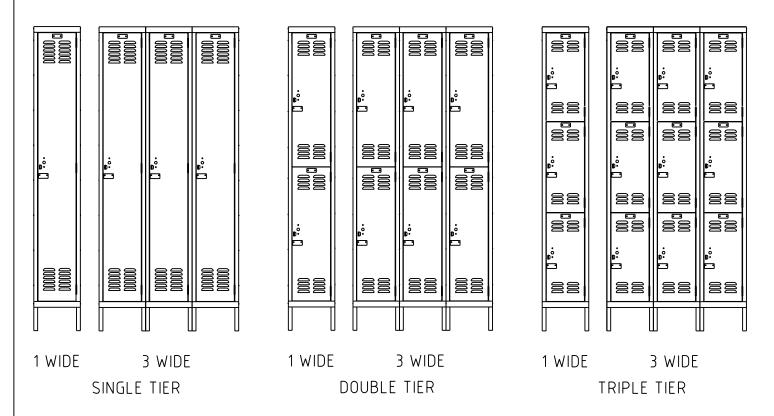

General Instructions

- 1. Check material received against the packing list. First check the number of packages received and then check the contents of each package.
- 2. Check material received for damage. If damage has occurred, secure a "damage notation" from the carrier.
- Identify each part as it is unpacked and put like parts together as close as possible to the working area in which they are to be assembled.
- 4. Be careful to use the correct hardware as specified in the assembly instructions.
- 5. Items with suffix (xx) are available options.

CAUTION

IN THE INTEREST OF SAFETY, ALL LOCKERS MUST BE SECURELY ANCHORED TO THE FLOOR AND/OR WALL.

FOR SAFETY, HANDLE ALL COMPONENTS CAREFULLY AND WEAR WORK-GLOVES WHEN ASSEMBLING LOCKERS.

INSTALL ALL UNITS PLUMB AND TIGHTEN ALL HARDWARE SECURELY.

RETAIN INSTRUCTIONS FOR FUTURE REFERENCE



2823 W. Orange Ave. Apopka, FL 32703 Phone (866) 566-0500 Fax (407) 464-3610

www.Hallowell-List.com

VALUEMAX" K.D. WARDROBE STOCK LOCKER ASSEMBLY INSTRUCTIONS

		PAC	PACKAGE CONTENTS													
REF. NO.	DESCRIPTION	PART NO.		DE QUAN 2-TIER			DE QUAN 2-TIER									
1	REAR PANEL	KRwwhh	1	1	1	3	3	3								
2	RIGHT/LEFT SIDE PANEL	KPddhh	2	2	2	4	4	4			М	~				
3	TOP/BOTTOM SHELF	KSwwdd	2	2	2	6	6	6				`	'n			
(3) (4) (5) (6)	HAT SHELF	KHwwdd	1	1	2	3	3	6					1			
(5)	SINGLE CEILING HOOK	н5К	2	4	-	6	12	-		ľ			H			
6	DOUBLE CEILING HOOK	H7K	1	2	3	3	6	9		│	1 /	√ .				
××7	COAT ROD BRACKET	××TRH 200	××2	××4	-	××6	××12	-				. >				
*×8	COAT ROD	××KCR	××1	××2	-	××3	××6	-].	1	1				
9	DOOR FRAME ASSEMBLY	KDFwwhh-tFP	1	1	1	3	3	3					$\ \ \ \ \ $			
×(10)	DOOR	KDwwhh-tFP	1	2	3	3	6	9		-		'				
11)	NUMBER PLATE	NPH	1	2	3	3	6	9					.			
12	NUMBER PLATE RIVET	RV101	2	4	6	6	12	18				Ŀ	·			
13	3/8" SLOTLESS BOLT	MBT200	62	74	70	134	166	188				`	 			
(14) (15)	HEX NUT	N201	60	70	64	128	154	170		V		· 🔊 `	*III			
(15)	HI-DOME CAP NUT	N110	2	4	6	6	12	18				~	#			
16	BOX DOOR LATCH PULL	KBLP100	1	2	3	3	6	9			Single	Tier				
×× (17)	STRIKE PLATE	×× SP100	1	2	3	3	6	9			KD Loci		1.			
18	REAR LEG	KLG	2	2	2	2	2	2								
18 × 19	BUMPER	KDB300	3	4	6	9	12	18								
×20	RIVET (HINGE)	RV102	6	8	12	18	24	36	DAD	ST AILIA	MBER SUF	בוע כוור)C			
											PTH, HEI					
											R TO SPE					

NOTE:

FOR OPTIONAL INDIVIDUAL SLOPE TOPS, SEE SUPPLEMENTAL INSTRUCTION SHEET NO. ASY-H-KIST-A

FOR OPTIONAL 6" HIGH CLOSED METAL BASE, SEE SUPPLEMENTAL INSTRUCTION SHEET NO. ASY-H-KIST-B

- × SHIPS PRE-HUNG IN DOOR FRAME ASSEMBLY (9)
- ** OPTIONAL ITEM

PART NO. LEGEND:

ww = WIDTH

dd = DEPTH

hh = HEIGHT (FRAME)

t = TIER

TOOLS REQUIRED: 3/8" NUT DRIVER (3/8" SOCKET MAY BE SUBSTITUTED)

TWO-YFAR WARRANTY

HALLOWELL K.D. LOCKERS ARE COVERED AGAINST ALL DEFECTS IN MATERIALS AND WORKMANSHIP EXCLUDING FINISH, DAMAGE RESULTING FROM DELIBERATE DESTRUCTION AND VANDALISM FOR A PERIOD OF TWO YEARS.



VALUEMAX K.D. WARDROBE STOCK LOCKER ASSEMBLY INSTRUCTIONS 2 4 5 10 6 xx7 8xx)& xx (17 3 18 18 SIDE PANELS MUST GO INSIDE REAR PANEL AND INSIDE FRAME. TOP VIEW FRONT FOR 9" AND 12" WIDE SHELVES ONLY USE PROVIDED MIDDLE 1 WIDE UNIT PLAN VIEW HOLES FOR FASTENING. (ALL ITEMS (3) KS SHELF) FOLLOW BASIC INSTRUCTIONS FROM 3-WIDE ASSEMBLY

** - OPTIONAL ITEMS

HALLOWELL MAKES EVERY EFFORT TO ENSURE THAT ALL UNITS SHIP COMPLETE; HOWEVER, SHOULD YOUR UNIT CONTAIN MISSING OR DAMAGED PARTS, REPLACEMENTS MAY BE OBTAINED FROM HALLOWELL. TO OBTAIN PARTS, FOLLOW THESE INSTRUCTIONS.

PLEASE PROVIDE THE FOLLOW INFORMATION:

MODEL NUMBER

DESCRIPTION OF PART(S) NEEDED & PART NUMBER(S) AS SHOWN IN PARTS LIST COLOR PURCHASE DATE

COMPANY NAME & CONTACT PERSON


WHERE THE PRODUCT WAS PURCHASED FROM


IF REQUESTING PARTS BY TELEPHONE, ASK FOR CUSTOMER SERVICE & PROVIDE THE ABOVE INFORMATION.




VALUEMAX" K.D. WARDROBE STOCK LOCKER ASSEMBLY INSTRUCTIONS


(A GROUPING OF 3-WIDE SINGLE TIER LOCKERS ILLUSTRATED)

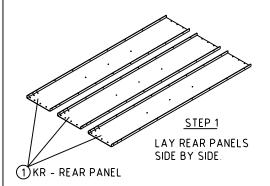

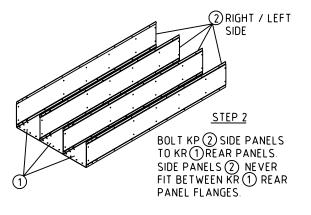

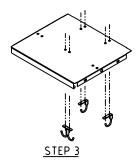

INSTALL DOUBLE CEILING HOOK (H7K) 6 AND SINGLE CEILING HOOKS (H5K) (5) TO (KH) (4) HAT SHELF

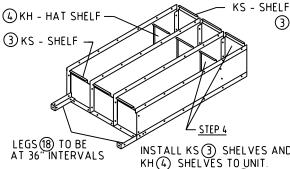


INSTALL KS (3) SHELVES AND KH (4) SHELVES TO UNIT. INSTALL TWO KLG (B) REAR
LEGS TO INSIDE OF SIDE (2) AND REAR
PANEL (1) BY SLIDING INTO PLACE FROM BOTTOM.

3


STEP 5

BOLT DOOR AND FRAME (9) ASSEMBLIES TO KS 3 SHELVES AND KP 2 SIDE PANELS STAND UNIT UP AND ALIGN LOCKER TOPS EVENLY. TIGHTEN ALL **BOLTS AND NUTS** NOTE: WHEN BOLTING ONE UNIT TO ANOTHER, OMIT ONE SET OF BOLTS IN END FRAME AND SIDE TO MINIMIZE GROWTH FROM BOLT HEADS


ASSEMBLY OF SINGLE ROW LOCKERS NEVER PUT SIDE PANELS BETWEEN FRAMES OR REAR PANELS



SIDE PANELS MUST GO INSIDE REAR PANEL AND INSIDE FRAME.

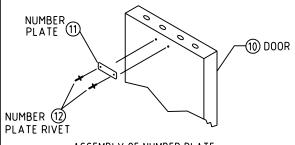



ASSEMBLY OF NUMBER PLATE



BRACKETS TO BE BOLTED TO UNDERSIDE OF HAT SHELF WITH COAT ROD IN BETWEEN.

- ××① COAT ROD BRACKETS (××TRH 200)
- xx(8) COAT ROD (xxK(Rww)





(6) DOUBLE CEILING HOOK (H7K)

TO BE BOLTED TO UNDERSIDE OF HAT SHELF. (5) SINGLE CEILING HOOK (H5K)

TO BE BOLTED TO UNDERSIDE OF HAT SHELF

