

# Adjustable Leg Workbench Wiring Kit Assembly Instructions

## General Instructions

1. Check material received against the packing list. Check the number of packages received and then check the contents of each package.
2. Check the material received for damage. If damage has occurred, secure a “damage notation” from the carrier
3. Identify each part as it is unpacked and put like parts together as close as possible to the working area where they are to be assembled.
4. Be careful to use the correct hardware as specified in the assembly instructions.

## CAUTION

In the interest of safety, all lockers must be securely anchored to the floor and/or wall. For safety, handle all components carefully and wear work gloves when assembling lockers. Install all units plumb and tighten all hardware securely. Retain instructions for future reference.



866-566-0500  
info@Hallowell-List.com  
www.Hallowell-List.com

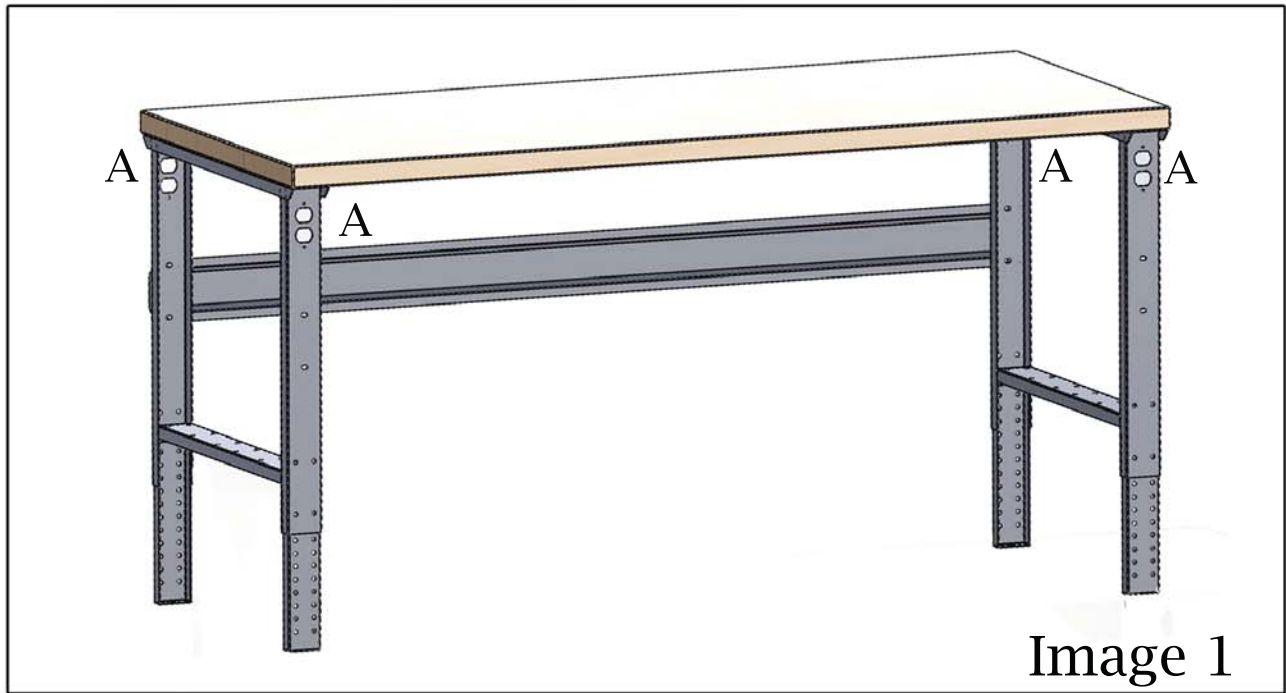


Image 1

1. Choose (two) workbench legs locations (A-Image 1) to install the AC Receptacles (B & C-Image 2).  
They will fit from behind, inside the channel, after the knock-outs are removed.  
Note one receptacle (C-Image 2) has an On/Off Power Switch and Circuit Breaker on the rear.
2. Remove knock-outs
3. Remove two (2) screws (D-Image 2) from receptacle.  
Place receptacle with housing into the rear of the leg channel.  
Re-install screws thru the leg, into the receptacle/housing.
4. Repeat step 3 with the remaining receptacle/housing
5. Use Wire Management Clips (not shown) to tidy excess wire under the workbench
6. Plug into power source and turn on the Power Switch.

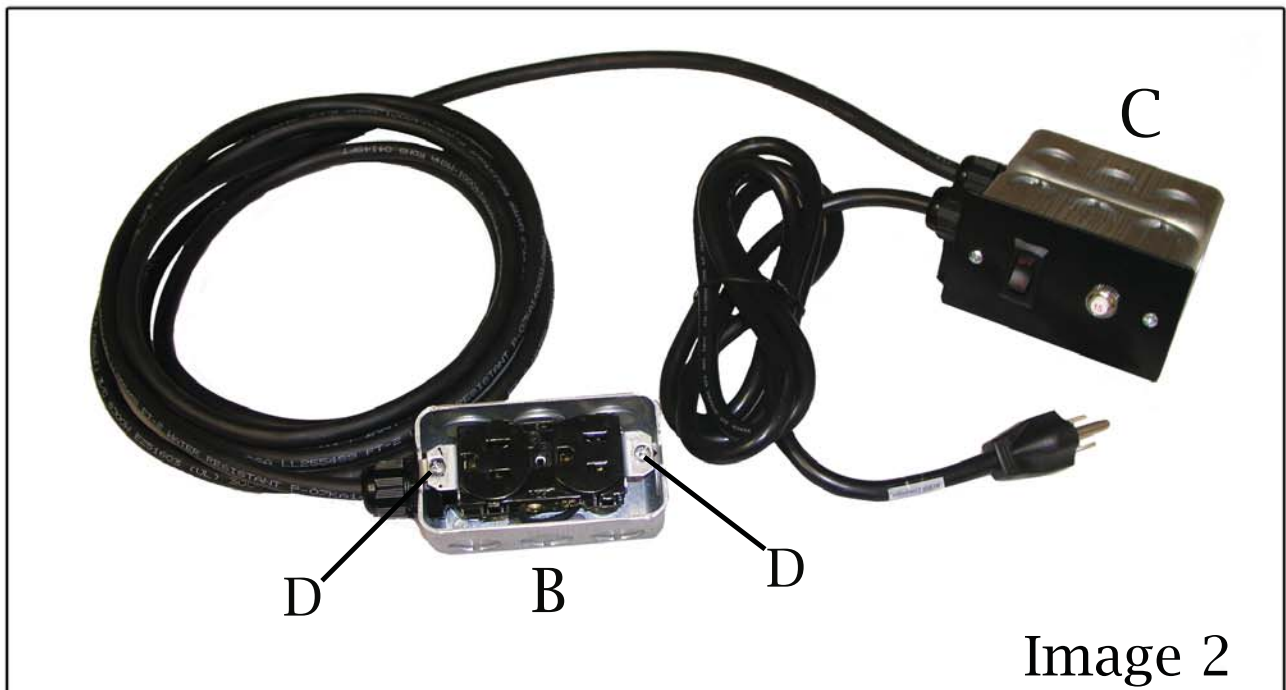


Image 2